

Installation Guide

(200 x 32mm)



15-25mm head hammer




T20 drive bits




Screw
10g x 65mm





Plug

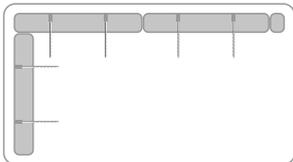

Option A

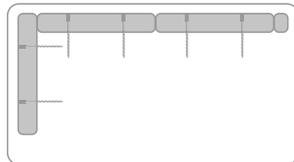


Option B

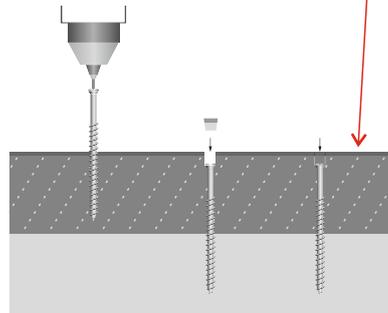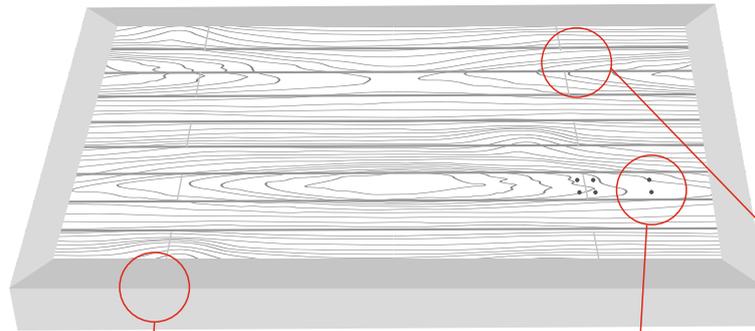

Selfdrive
Screws

10-15mm
from the top

Tap in plug
with hammer

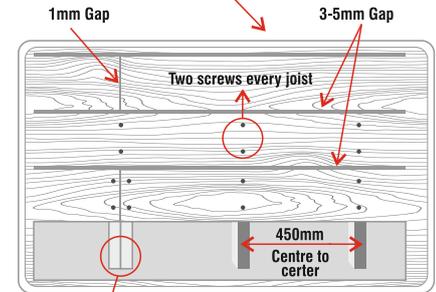

Double joists on butt joint